



2300  
+  
00

18	151	PHASE 1
10	632	PHASE 2
161	18	PHASE 3

PHASE 1	29	277
PHASE 2	19	1149
PHASE 3	296	34

2300  
+  
00

2299  
+  
50

14	148	PHASE 1
11	609	PHASE 2
159	14	PHASE 3

PHASE 1	25	291
PHASE 2	23	1096
PHASE 3	311	28

2299  
+  
50

2299  
+  
00

12	166	PHASE 1
14	575	PHASE 2
177	12	PHASE 3

PHASE 1	27	383
PHASE 2	31	1177
PHASE 3	397	31

2299  
+  
00