



2303
+
00

AREA	EXC.	EMB.	PHASE
	33	11	PHASE 1
	33	161	PHASE 2
	11	33	PHASE 3

VOLUME	EXC.	EMB.	PHASE
	45	52	PHASE 1
	61	402	PHASE 2
	82	52	PHASE 3

2303
+
00

2302
+
50

AREA	EXC.	EMB.	PHASE
	16	46	PHASE 1
	32	272	PHASE 2
	78	16	PHASE 3

VOLUME	EXC.	EMB.	PHASE
	39	122	PHASE 1
	47	639	PHASE 2
	169	45	PHASE 3

2302
+
50

2302
+
00

AREA	EXC.	EMB.	PHASE
	27	86	PHASE 1
	18	418	PHASE 2
	105	27	PHASE 3

VOLUME	EXC.	EMB.	PHASE
	43	170	PHASE 1
	50	886	PHASE 2
	220	49	PHASE 3

2302
+
00