



2448
+
00

AREA	EXC.	EMB.	PHASE
23	40	40	PHASE 1
106	27	27	PHASE 2
40	23	23	PHASE 3

2448
+
00

VOLUME	EXC.	EMB.	PHASE
50	57	57	PHASE 1
217	49	49	PHASE 2
57	58	58	PHASE 3

2447
+
50

AREA	EXC.	EMB.	PHASE
31	21	21	PHASE 1
128	26	26	PHASE 2
21	31	31	PHASE 3

2447
+
50

VOLUME	EXC.	EMB.	PHASE
68	22	22	PHASE 1
273	50	50	PHASE 2
22	79	79	PHASE 3

2447
+
00

AREA	EXC.	EMB.	PHASE
43	3	3	PHASE 1
166	28	28	PHASE 2
3	43	43	PHASE 3

2447
+
00

VOLUME	EXC.	EMB.	PHASE
84	3	3	PHASE 1
307	65	65	PHASE 2
3	96	96	PHASE 3