



2454
+
00

AREA	PHASE	EXC.	EMB.
	PHASE 1	0	0
	PHASE 2	0	0
	PHASE 3	0	2

2454
+
00

PHASE	EXC.	EMB.
PHASE 1	0	0
PHASE 2	0	0
PHASE 3	11	3

2453
+
50

AREA	PHASE	EXC.	EMB.
	PHASE 1	0	0
	PHASE 2	0	0
	PHASE 3	12	0

2453
+
50

PHASE	EXC.	EMB.
PHASE 1	8	49
PHASE 2	0	0
PHASE 3	60	4

2453
+
00

AREA	PHASE	EXC.	EMB.
	PHASE 1	8	53
	PHASE 2	0	0
	PHASE 3	52	4

2453
+
00

PHASE	EXC.	EMB.
PHASE 1	15	132
PHASE 2	0	0
PHASE 3	132	12