



Panel Style: guide_exp_interchange.ssi
 Dimensions are in inches.tenths
 Letter locations are panel edge to lower left corner

LETTER POSITIONS (X)		LENGTH	SERIES/SIZE							
C	o	l	b	e	r	t				EM 2000
34.7	45.4	56	62.4	71.8	82.2	89				10.7/8
D	u	r	a	n	t					EM 2000
13.3	25.2	36.5	43.5	54.8	65.1					10.7/8

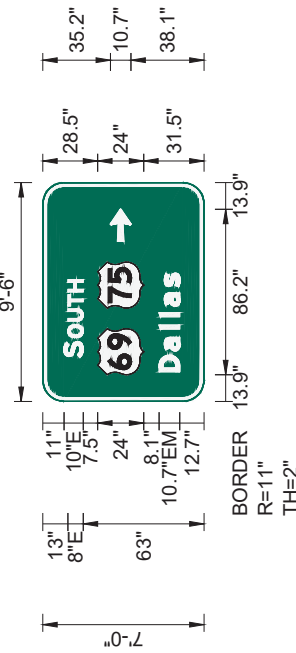


Panel Style: guide_exp_advance_minor.ssi
 Dimensions are in inches.tenths
 Letter locations are panel edge to lower left corner

LETTER POSITIONS (X)		LENGTH	SERIES/SIZE							
S	O	U	T	H						E 2000
23	33.2	41.8	49.6	57						40.4 10.8
D	a	l	l	a	s					EM 2000
15.4	26.3	37.7	44.1	49.5	59.7					51.4 10.7/8

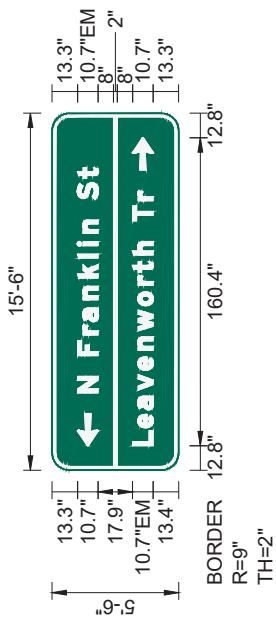


Panel Style: guide_exp_interchange.ssi
 Dimensions are in inches.tenths
 Letter locations are panel edge to lower left corner

LETTER POSITIONS (X)		LENGTH	SERIES/SIZE																		
N		F	r	a	n	k	i	n	s	t											EM 2000
40.3	49	59.7	70.5	77.4	88.8	100.1	110.5	116.9	123.3	130.4	141.1	152									117.3 10.7/8
L	e	a	v	e	n	w	o	r	t	h											EM 2000
12.8	22.1	31.5	41.7	52.1	62.4	72.6	85.7	96.3	103.1	112.1	119.2	129.9	140.3	132.9							10.7/8

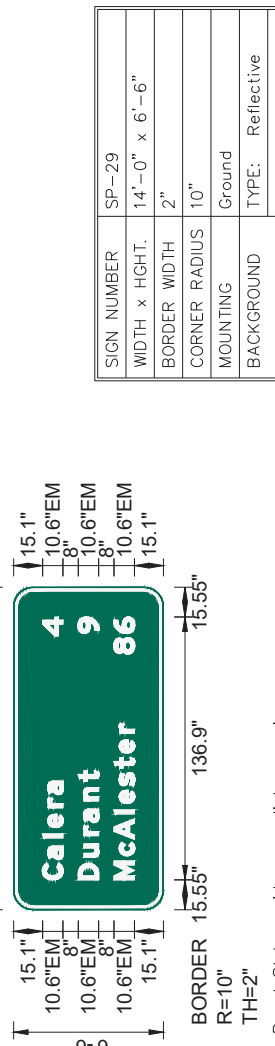


Panel Style: guide_exp_distance.ssi
 Dimensions are in inches.tenths
 Letter locations are panel edge to lower left corner

LETTER POSITIONS (X)		LENGTH	SERIES/SIZE																			
C	a	l	e	r	a																EM 2000	
15.5	26.1	37.4	42.8	53.1	60	142.6															136.9 10.6/8	
D	u	r	a	n	t																	EM 2000
15.5	27.3	38.5	45.4	56.7	66.8	143.9															136.9 10.6/8	
M	c	a	l	e	s	t																EM 2000
15.5	28.1	36.6	49.9	55.3	64.4	73.6	81.6	91.9	133.2	143.9											136.9 10.6/8	

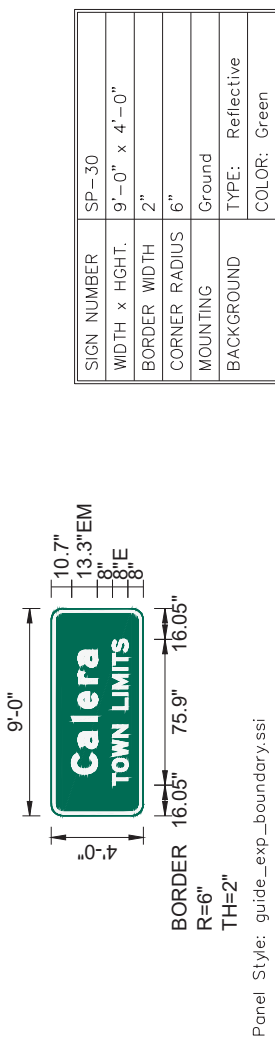

Panel Style: guide_exp_boundary.ssi
 Dimensions are in inches.tenths
 Letter locations are panel edge to lower left corner

LETTER POSITIONS (X)		LENGTH	SERIES/SIZE																		
C	a	l	e	r	a																EM 2000
21.7	35	49.1	55.9	68.8	77.5																64.5 13.3/10
T	O	W	N	L	I	M	I	T	S												E 2000
16	23.2	31	40.8	47.3	55.3	62.7	66.2	75.8	78.6	85.5											75.9 8

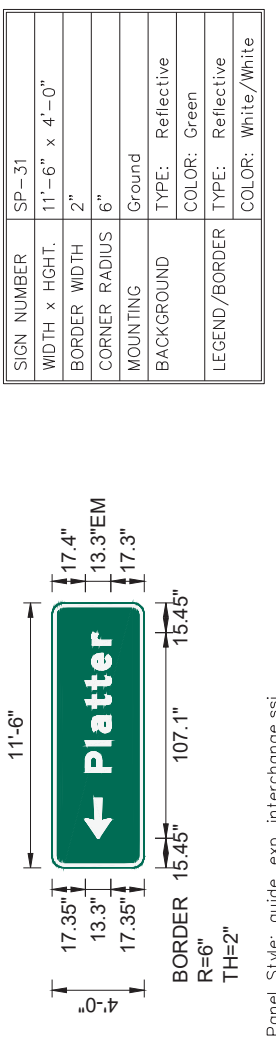

Panel Style: guide_exp_interchange.ssi
 Dimensions are in inches.tenths
 Letter locations are panel edge to lower left corner

LETTER POSITIONS (X)		LENGTH	SERIES/SIZE																		
P	l	a	t	t	e	r															EM 2000
49.7	63.6	70.4	83.2	93	103	115.9															72.9 13.3/10